



CT40 C - CT70 C Quick Guide

This Guide is intended for quick consultation only and does not replace the Use and Maintenance Manual. Before using the machine, read the Use and Maintenance Manual contained in the machine packaging thoroughly and rigorously respect all the instructions.

PREPARATION/OPERATION

Fill the detergent tank.



Press the brush button.




Begin working

When you have finished cleaning, proceed as follows:

- Turn the brush motor off.
- Turn the suction motor off.
- Raise the machine head.
- Raise the squeegee.

Lower the machine head by pressing the pedal downwards and to the left.

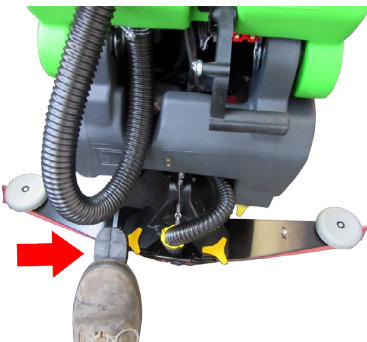

Press the suction button.



Operate the drive lever.



Lower the squeegee using the lever.



Open the detergent tank tap.





DAILY MAINTENANCE

Empty the dirty water drum through the drain hose.



Clean the dirty water drum.




Check the suction filter is undamaged and clean.



Check the detergent tank fill filter is undamaged and clean.



Check the detergent output filter is undamaged and clean.

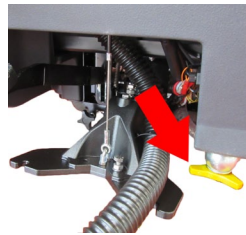

Clean the brush.



Check the squeegee is clean and the blades are not damaged.



REPLACING THE SQUEEGEE BLADES

- release the clip;
- remove the two blade retainers by pushing them towards the outside of the squeegee then extracting them;
- remove the blade;
- reuse the same blade by reversing the edge in contact with the floor until all four edges are worn out, or replace with a new blade, fitting it onto the screws on the body of the squeegee;
- reposition the two blade retainers by centring the widest part of the slots over the fixing screws on the squeegee body, then pushing the blade retainers inwards;
- fasten the clip;

AUTOMATIC BRUSH ATTACHMENT

Attaching the brush: rest the brush on the floor in front of the machine and centre it with the guard. Lower the head and operate the brush/drive lever repeatedly until the brush automatically engages on the flange hub. If the operation is not successful, repeat by pressing on the lever again and repeating the centring.

Removing the brush: raise the machine head by pushing the head lift pedal down and then to the right and operate the brush/drive lever repeatedly. After operating the lever a few times, the brush is released and falls to the ground.

THE MACHINE DOES NOT COME ON/START UP	CHECK THE POWER CABLE IS PLUGGED INTO A FUNCTIONING SOCKET
THE SUCTION MOTOR DOES NOT WORK	CHECK THE DIRTY WATER DRUM IS NOT FULL CHECK THE DIRTY WATER DRUM LEVEL SENSOR IS NOT BLOCKED/MALFUNCTIONING
THE MACHINE LEAVES THE FLOOR WET	CHECK THE SQUEEGEE BLADES ARE NOT WORN CHECK THERE IS NO DEBRIS BETWEEN THE TWO SQUEEGEE BLADES CHECK THERE IS NO DEBRIS IN THE SUCTION HOSE CHECK THE SUCTION FILTER IS UNDAMAGED AND CLEAN CHECK THE DETERGENT TANK LID IS CLOSED CORRECTLY CHECK THE SUCTION HOSE IS CORRECTLY ATTACHED TO THE SQUEEGEE
THE MACHINE LEAVES THE FLOOR DIRTY	CHECK THE TYPE OF BRUSH/PAD IN USE IS SUITABLE FOR THE TYPE OF DIRT AND FLOOR
THE MACHINE LEAVES STRIPES OF WET FLOOR	CHECK THE FLOOR HAS BEEN BRUSHED BEFORE USING THE MACHINE CHECK THERE IS NO DEBRIS BETWEEN THE TWO SQUEEGEE BLADES CHECK THE SQUEEGEE BLADES ARE NOT WORN CHECK THE SQUEEGEE IS CORRECTLY ADJUSTED